

# ArtWay A.C.E. Cordless Extruder with 2 button controls



**Rod**  
**Lever**  
**Dial #6**  
 setting is  
 Recommended  
 for  
 Polymer clay  
 Pulsing the  
 Button is also  
 helpful

Loading product into the A.C.E. Cordless 2 inch Extruder is the same as loading the 2 inch manual A.C.E. extruder.

Loading and use of the 1 inch accessory barrel is the same here as it is with a manual 2 inch A.C.E. extruder.



To move the **rod** in and out, pull out on the **lever** while pressing the **top** button.



Press the top button to move the **lever** out and load your product into the barrel.

Press lower button to dispense your product.

Press and release or "pulse" to dispense and have a steady flow of product.



This button, located on the handle. Has an image of a lock and unlock slides to lock and unlock  
 In the lock position the rod will not move or dispense Material.



To avoid damaging your machine, NOTICE the position of the **Rod** to determine if you have emptied the barrel.

Do not continue to press the button

When your **Rod** has moved into this position your **barrel is empty**

<p>Battery</p>	<p>To charge battery:          slide battery onto the          charger platform          and plug unit into an          electrical outlet</p>	<p>Slide a <b>charged</b>          battery on to the base of the          extruder          Load your extruder with product          and <b>Extrude with Success</b></p>