


Re assembling ArtWay Two inch barrel Extruder

Re assembling Steps 1-6

1

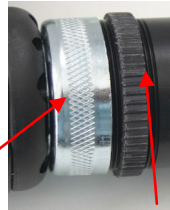

Hold steady the silver ring as you thread on the barrel
Note the threads on the barrel are different
The threaded end with the black ring will only fit into the handle end of the extruder

To tighten your barrel into position
Screw the black ring close to the silver ring

Extruder Parts

Barrel

Hex nut



Two metal Washers

In the 1 inch extruder There are no metal washers


Retaining ring

Notice this Hex nut remains on the rod
IT IS NEVER REMOVED

Piston/cup

*** Piston/cup Placement ***
Place barrel into position and thread on completely then
Place piston / cup into position
This will avoid damaging the shape of the piston/cup

2

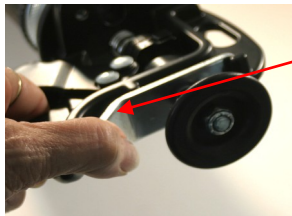

Press silver lever and at the same time push in the rod



3




Place the two metal washers on to the rod
In the 1 inch extruder the washer and piston is one piece

4



Push piston/cup into the barrel and on to the rod
and thread on the hex nut

5

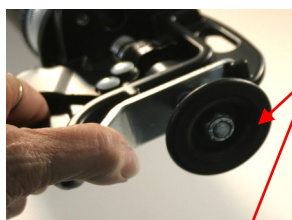

Press the silver lever and at the same time pull back the rod



In this position your extruder barrel is ready to load insert your extruding medium of choice and your design shape disk

6



Thread on the retaining ring and
Enjoy Extruding your shapes